
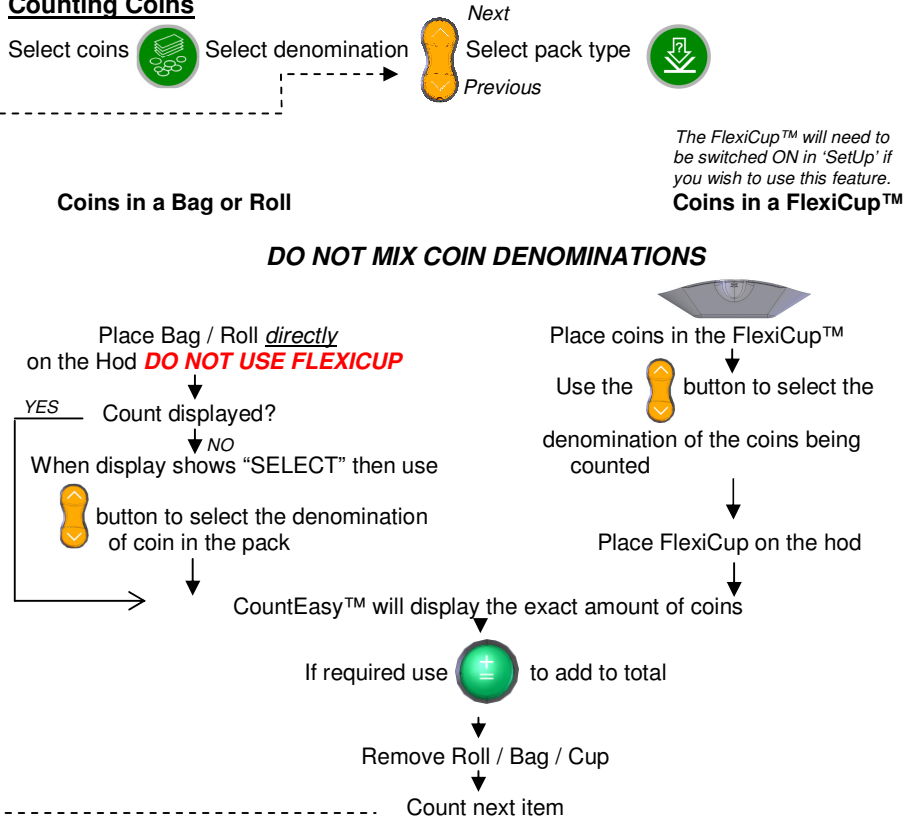 


Switching On


- 1: Place your CountEasy™ on a *flat stable surface away from draughts*.
- 2: DO NOT use near an open window, fan or air-conditioning.
- 3: Ensure hod is empty
- 4: Turn on 

Counting Coins



NOTE: The total currently on the hod is displayed in the top right hand of the display. The running total will be displayed in the bottom right hand of the display.

Counting Notes

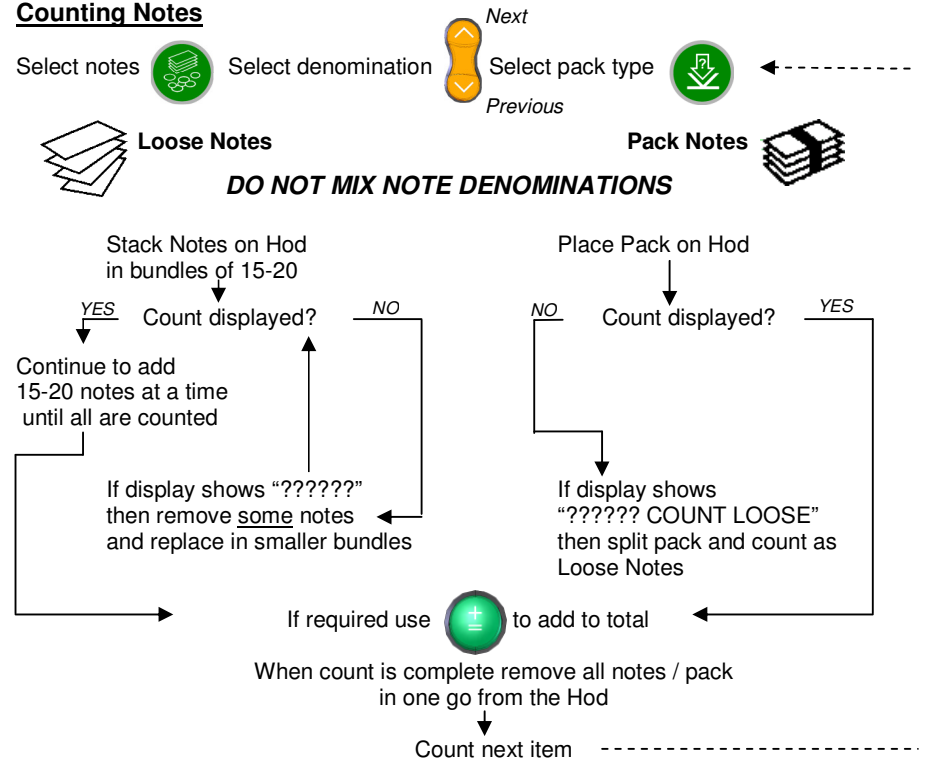



IMPORTANT INFORMATION: It is very important on new machines that you count loosely more than 1,000 notes for each denomination before the Pack Check on Notes is used.



In order to then continuously use the Pack Check on Notes you will also need to continue to count a large number of loose notes on the machine as this will maintain the accuracy of the Pack Check on Notes.


If you do not continue to count loose notes on the machine it will not be able to recognize 100% of the bundled notes as full and the "????????? Count Loose" prompt may regularly appear on the screen.


Auto scroll on/off

Press down on either arrow  and hold for 5 seconds to turn Auto scroll on or off (Not available in Pack mode)


To **View Coin Sub-Totals** press the  button when coins are selected and then the  button to scroll to denomination.

To **View Note Sub-Totals** press the  button when notes are selected and then the  button to scroll to denomination.

To **Print Grand Total** press and hold down the  button until printing starts. Once started release the button. Remove print out from the printer.

To **Clear a Denomination Sub-Total** view the denomination sub-total as detailed above and then press the  button to clear.

To **Clear Grand-Total** press  followed by  button.

To **Turn Off** press and hold the  button.

Error Messages

- 1: 'REPLACE/ZERO' means that something has been removed from the hod and needs to be replaced or "zeroed" before weighing can take place.
- 2: 'REMOVE/ZERO' means something has been added to the hod and needs removing or "zeroing" off before weighing can take place.

Warnings

- 1: DO NOT drop heavy weights onto the hod. Maximum weight 1 Kg.
- 2: Only use the charger supplied with the CountEasy™.
- 3: Maximum operating temperature is 30 degrees C.

CAUTION: Batteries must be replaced with correct type - refer to 'CountEasy™ Configuration Manual'. There is a risk of explosion if the batteries are replaced by an incorrect type. Dispose of used batteries according to the manufacturers instructions.

Refer to the 'CountEasy™ Configuration Manual' for the configuration options available and the website for answers to the most Frequently Asked Questions / Troubleshooting Guide.



www.Volumatic.com



Recyclable

 
CE

Helpdesk: refer to machine

25-201668 Issue 11 Feb 2011

CountEasy™ Bank Quick Reference Guide

Assembly

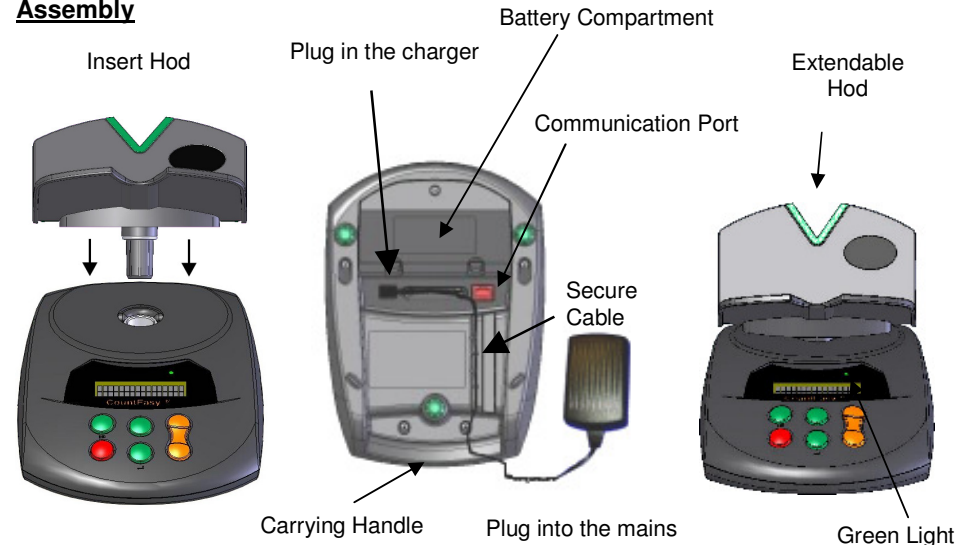

Charge the CountEasy™ for 12 hours before using in portable mode. The green light will be on continuously whenever a working charger is plugged into the CountEasy™ and the mains are switched on. The green light also indicates that the CountEasy™ is charging and will stay lit *even when the unit is fully charged*.

Controls

