
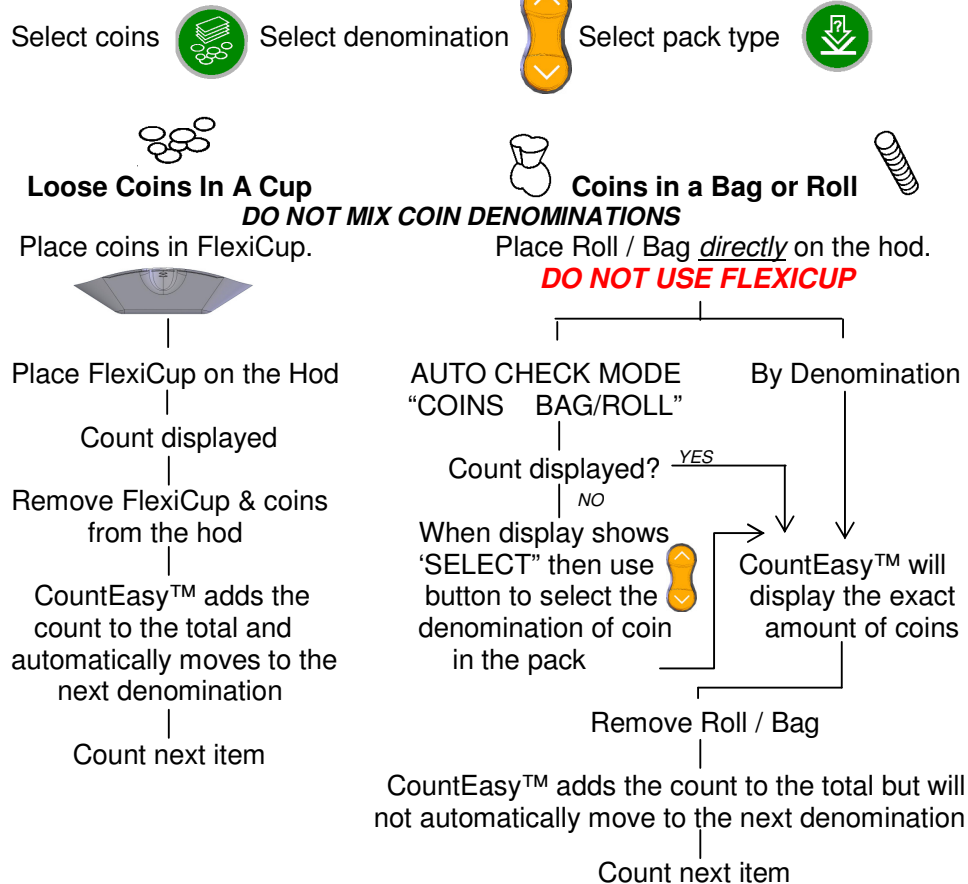



Switching On

- 1: Place your CountEasy™ on a *flat stable surface away from draughts*.
- 2: DO NOT use near an open window, fan or air-conditioning.
- 3: Ensure hod is empty
- 4: Turn on 



Counting Coins



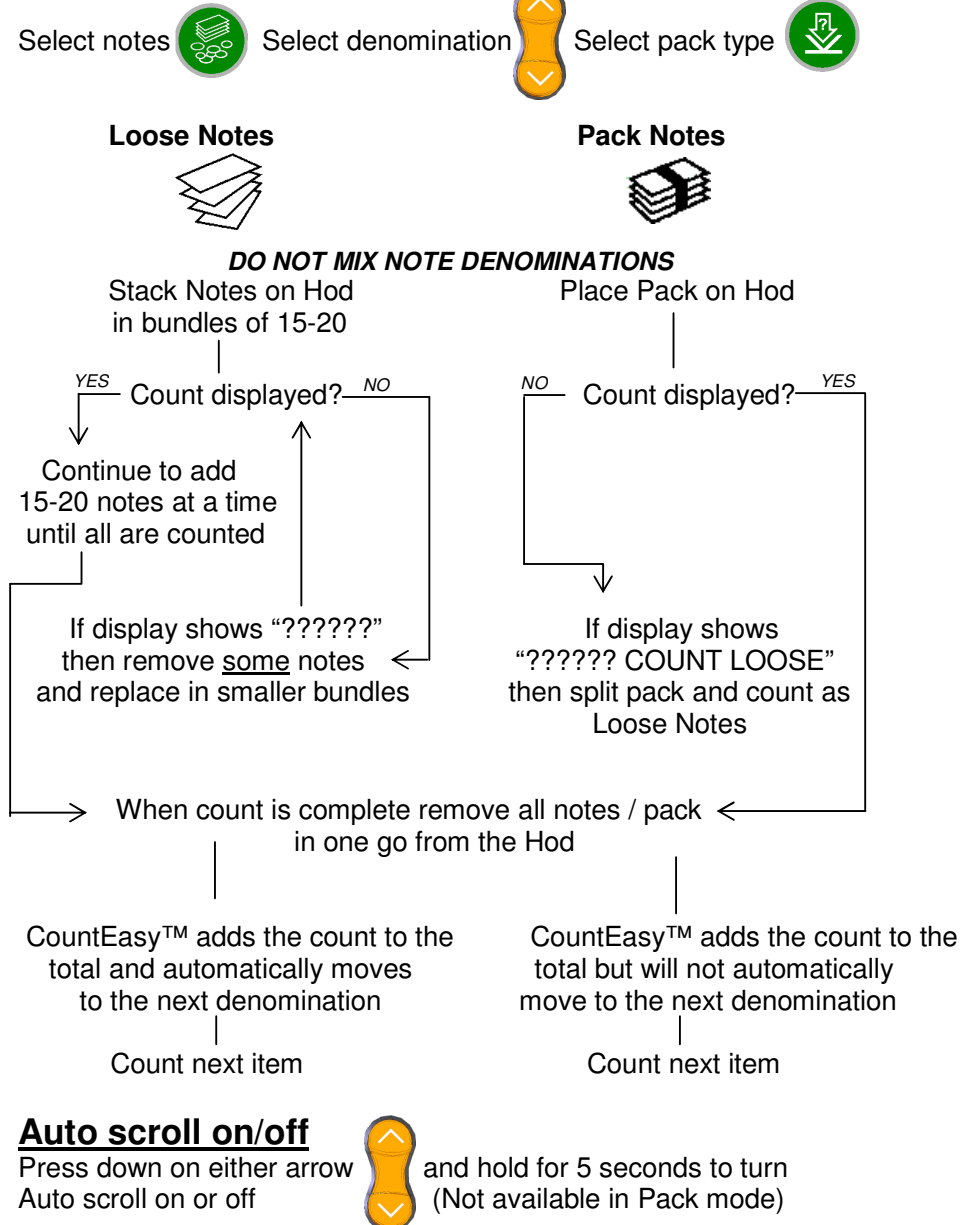


Counting Notes




Note: Running total always displayed in the bottom right hand side of the display


To **View Coin Sub-Totals** press the  button when coins are selected and then the  button to scroll to denomination.

To **View Note Sub-Totals** press the  button when notes are selected and then the  button to scroll to denomination.

To **Print Grand Total** press and hold down the  button until printing starts. Once started release the button. Remove print out from the printer.

To **Clear a Denomination Sub-Total** view the denomination sub-total as detailed above and then press the  button to clear.

To **Clear Grand-Total** press  followed by  button.

To **Turn Off** press and hold the  button.

Error Messages


- 1: 'REPLACE/ZERO' means that something has been removed from the hod and needs to be replaced or "zeroed" before weighing can take place.
- 2: 'REMOVE/ZERO' means something has been added to the hod and needs removing or "zeroing" off before weighing can take place.

Warnings

- 1: DO NOT drop heavy weights onto the hod. Maximum weight 1 Kg.
- 2: Only use the charger supplied with the CountEasy™.
- 3: Maximum operating temperature is 30 degrees C.

CAUTION: Batteries must be replaced with correct type - refer to 'CountEasy™ Configuration Manual'. There is a risk of explosion if the batteries are replaced by an incorrect type. Dispose of used batteries according to the manufacturers instructions.

Refer to the 'CountEasy™ Configuration Manual' for the configuration options available and the website for answers to the most Frequently Asked Questions / Troubleshooting Guide.

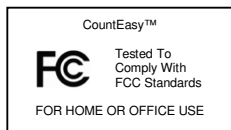


www.volumatic.com
Helpdesk: refer to machine



Recyclable
25-201667 Issue 10 Feb 2011

CountEasy™ Retail Quick Reference Guide

Assembly

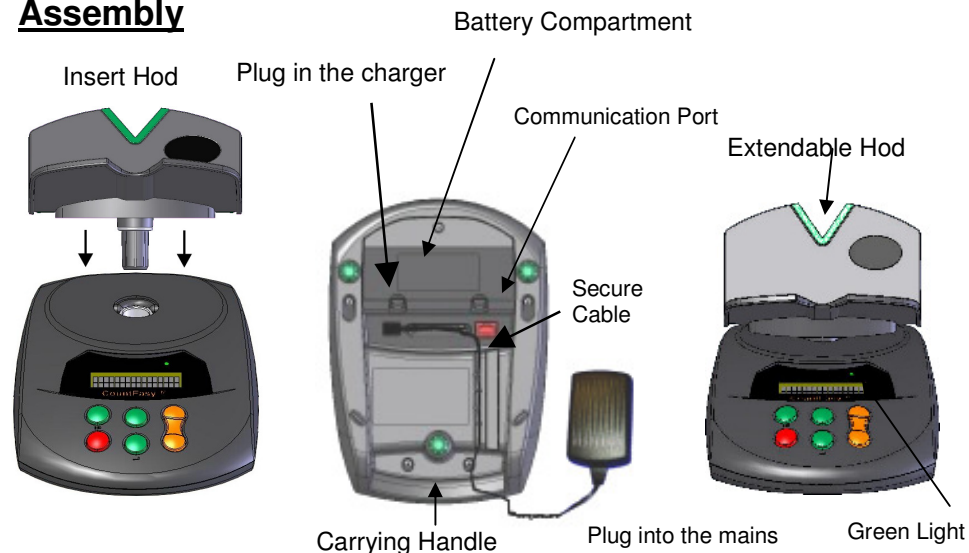

Charge the CountEasy™ for at least 12 hours before using in portable mode. The green light will be on continuously whenever a working charger is plugged into the CountEasy™ and the mains is switched on. The green light also indicates that the CountEasy™ is charging and will stay lit *even when the unit is fully charged.*

Controls

