

LANGUAGE?

Language options available are as follows:

Abbreviation	Language	Abbreviation	Language
GBR	English	FIN	Finnish
USA	English (US)	POL	Polish
ESP	Spanish	LTU	Lithuanian
DEU	German	EST	Estonian
FRA	French	LVA	Latvian
PRT	Portuguese	HUN	Hungarian
ITA	Italian	CZE	Czech
NLD	Dutch	SVN	Slovenian
GRV	Greek	SVK	Slovakian

COIN PACKS?


Select this option to choose the COIN PACKS used and the order in which they appear.

Select from BAG, ROLL, ROLL + BAG and BAG + ROLL.

For example selecting 'BAG' allows only bags to be used, selecting 'ROLL + BAG' allows Rolls and Bags to be used with Roll being displayed first and Bag being selected by pressing the 'pack' button and so on.

AUTO ADD?

Select this option to switch the AUTOMATIC ADD feature ON or OFF.

When ON a '+' symbol will be displayed in the right hand corner of the screen and each count is automatically added to the running total as the coins or notes are lifted from the hod. When OFF the user may manually add using the  button.

AUTO SCROLL?

Select this option to switch the AUTOMATIC SCROLL feature ON or OFF.

When ON a '>' symbol will be displayed in the right hand corner of the screen and as coins or notes are removed from the hod in Loose Count Mode*, the next highest denomination is automatically selected. * disabled when in Coin Pack Check Mode.

CUP?

Select this option to switch the option of CUP ON or OFF.

With CUP switched OFF the option of weighing loose coins in a CUP is removed.

SOUND?

Select this option to control the internal sounder of CountEasy.

Select from ON, OFF and ON ERROR.

The OFF and ON ERROR settings are useful if the sounder may be intrusive or where there are several CountEasy cash counters in use. When ON is selected, CountEasy will sound on 'good' and 'bad' counts. When OFF is selected, CountEasy will be silent. When ON ERROR is selected, CountEasy will only sound when an error condition occurs.

START IN CUP?

This option controls whether the machine starts up counting loose coins in a cup.

With CUP switched OFF this option will not appear in the options.

AUTO PACK CHECK?

Select this option to switch the AUTO PACK CHECK feature ON or OFF.

When ON you will have the option to count COINS in a BAG or ROLL without having to select a specific denomination, this is known as Auto Check mode.

When switched OFF you will still be able to count coins in a BAG or ROLL but will always need to select the denomination of the coin.

PRINTER EURO? (Only available when Euro currency selected)

Select Euro symbol for the printer either E or €

SMARTWEDGE?

Set this option to YES only if you are using SMARTWEDGE to communicate to your computer.

PRINTING ORDER?

Determines the order of the printout whether descending or ascending.

AUTO CHECK FIRST?

When on AUTO PACK CHECK appears first before packs by denomination.



CALIBRATE PACKS?



This allows you to calibrate each pack type and is vital to ensure the accuracy of CountEasy when counting coins in a roll or bag.



To calibrate packs you will need four (4) actual samples of each pack type i.e. x4 empty samples of the rolls and/or bags used. Calibrated pack weights are displayed in grams and are stored individually for each pack type and for each denomination.

ROLLS?

Select this option to calibrate the packaging used on the ROLLS of coin you intend to check.

Use the  button to scroll through the denominations press  to select.

When prompted by the   arrows place four (4) of the empty denomination packs onto the hod.

Remove them all in one go when prompted by the   arrows. Calibration is complete.

It is strongly recommended that all packs used should be calibrated in for each denomination.

BAGS?

Select this option to calibrate the BAGS in which the coin you intend to check is packaged.

Follow the procedures as detailed above, but with BAGS? selected.

NOTE PACKS?

Select this option to calibrate the pack types that are used to pack notes i.e. bands, sleeves, clips etc.

Follow the procedures as detailed above, but with NOTE PACKS? selected.

CALIBRATE CUP?

This allows you to recalibrate the weight of the FlexiCup or to calibrate the weight of an alternate weighing vessel used to count Loose Coin. CountEasy is factory calibrated to use the FlexiCup provided.


Place the empty FlexiCup or alternate weighing vessel onto the hod as prompted

by the ↓ ↓ arrows. Remove when prompted by the ↑ ↑ arrows.

Calibration is complete.

REPLACING BATTERIES

There is a risk of explosion if the batteries are replaced by an incorrect type. Batteries must be replaced with 6 x 1300mA NiMH AA cells.

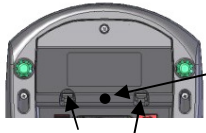

To replace the batteries remove the screw that secures the battery cover.

Then release the holding clips to remove the battery cover.

Remove the used batteries and dispose of them according to the manufacturers instructions. Insert new batteries the right way round as indicated inside the battery compartment. Once in place, clip the cover back in place and replace the screw.

**Advanced configuration options are available.
Details of these can be found on the Volumatic website at**

www.volumatic.com

**On the website you will also find answers to the most
Frequently Asked Questions / Troubleshooting Guide
on CountEasy and its use.**



www.volumatic.com

Helpdesk: refer to machine



Recyclable


25-201673 Issue 10 Jan 2011

CountEasy Configuration Manual

CountEasy (CE2.6) configuration options are detailed in this manual.


Entering Setup




Press and hold down the (down) button **and** the  button at the same

time for about 4-5 seconds. The screen will momentarily display 'SETUP' and will then read 'GRAMS?'. Release the buttons.

Finding Your Way Around Setup

To move between the options use the  button.

To select an option use the  button.

To move back an option or to leave Setup use the  button.

ESC

It is important that you understand the function of the above keys whilst in Setup.

SETUP MENU OPTIONS

GRAMS?

This allows you to weigh any item with the weight displayed in grams.

OPTIONS?

Provides the following configuration options:

LANGUAGE? - AUTO CHECK FIRST? - PRINTING ORDER? - COIN PACKS?
SMARTWEDGE? - AUTO PACK CHECK? - *START IN CUP? - AUTO ADD?
SOUND? - CUP? - AUTO SCROLL - AUTO ADD? - COIN PACKS?

LANGUAGE?

Select this option to choose between 18 languages as listed in the table overleaf.

Please note selecting a different language does not change the currency being counted.