
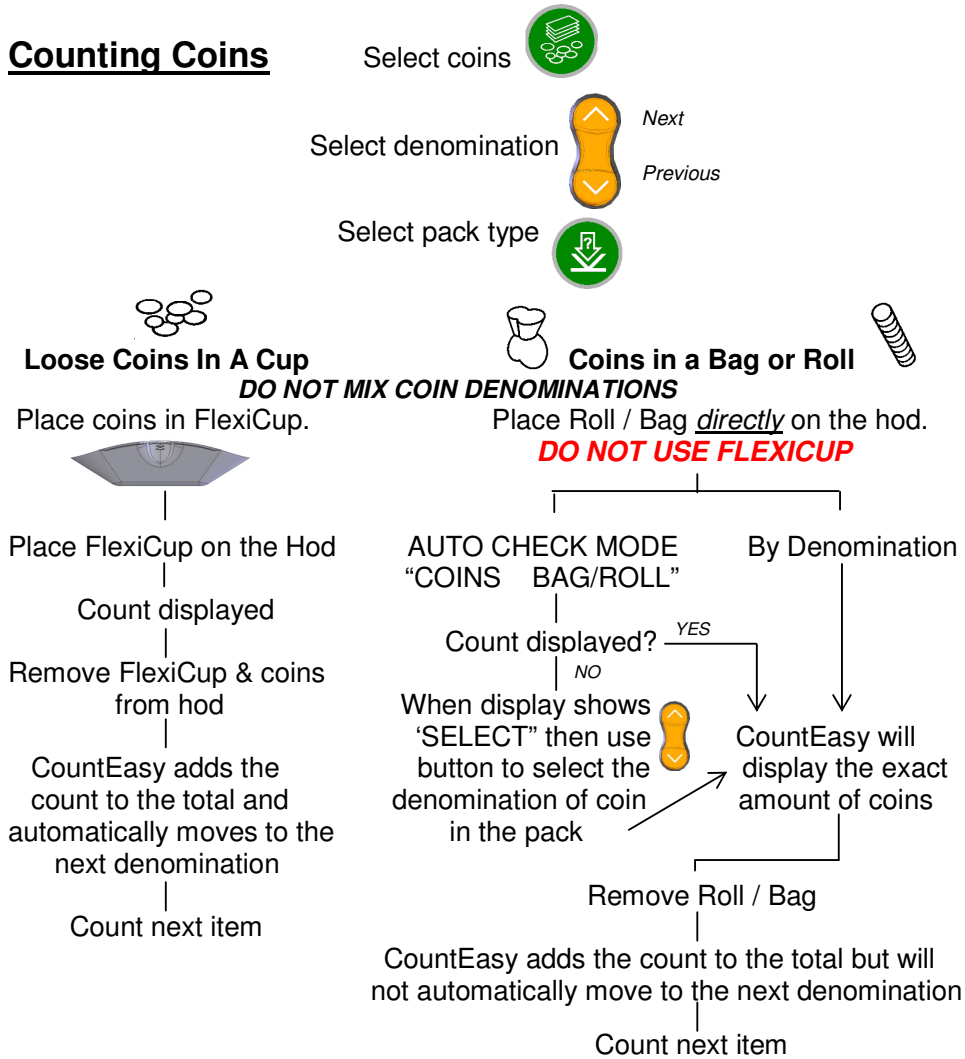 



Switching On



- 1: Place your CountEasy on a *flat stable surface away from draughts*.
- 2: DO NOT use near an open window, fan or air-conditioning.
- 3: Ensure hod is empty
- 4: Turn on 

 Counting Coins



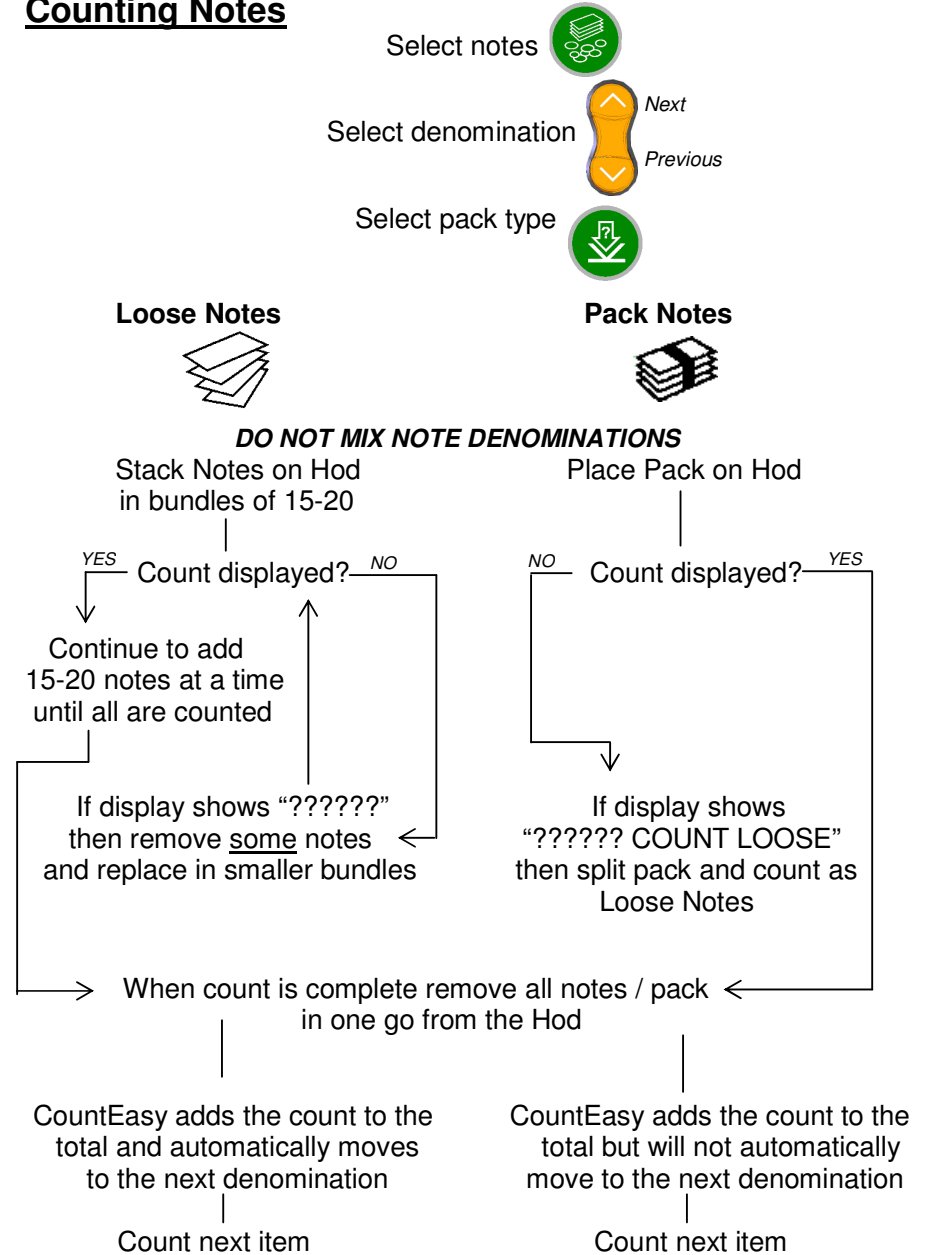

Counting Notes




To **View Coin Sub-Totals** press the  button when coins are selected and then the  button to scroll to denomination.

To **View Note Sub-Totals** press the  button when notes are selected and then the  button to scroll to denomination.

To **Print Grand Total** press and hold down the  button until printing starts. Once started release the button. Remove print out from the printer.

To **Clear a Denomination Sub-Total** view the denomination sub-total as detailed above and then press the  button to clear.

To **Clear Grand-Total** press  followed by  button.

To **Turn Off** press and hold the  button.

Error Messages

- 1: 'REPLACE/ZERO' means that something has been removed from the hod and needs to be replaced or "zeroed" before weighing can take place.
- 2: 'REMOVE/ZERO' means something has been added to the hod and needs removing or "zeroing" off before weighing can take place.

Warnings

- 1: DO NOT drop heavy weights onto the hod. Maximum weight 1 Kg.
- 2: Only use the charger supplied with the CountEasy.
- 3: Maximum operating temperature is 30 degrees C.

CAUTION: Batteries must be replaced with correct type - refer to 'CountEasy Retail Configuration Manual'. There is a risk of explosion if the batteries are replaced by an incorrect type. Dispose of used batteries according to the manufacturers instructions.

Refer to the 'CountEasy Retail Configuration Manual' for the configuration options available and the website for answers to the most Frequently Asked Questions / Troubleshooting Guide.



Recyclable
CE Retail

 
www.volumatic.com
Helpdesk: refer to machine



25-201667 Issue 9 Jul 2009

CountEasy Retail Quick Reference Guide

Assembly

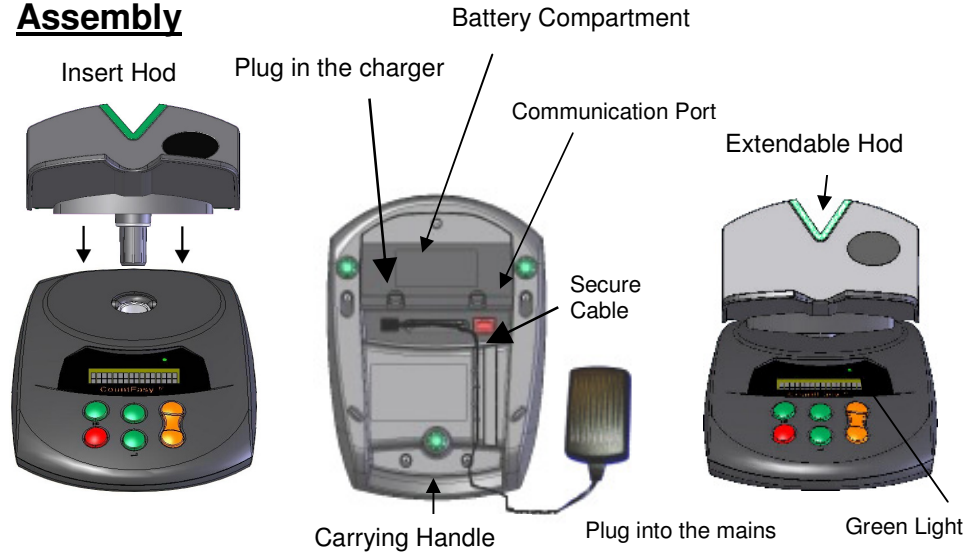

Charge the CountEasy for at least 12 hours before using in portable mode. The green light will be on continuously whenever a working charger is plugged into the CountEasy and the mains is switched on. The green light also indicates that the CountEasy is charging and will stay lit *even when the unit is fully charged.*

Controls

