
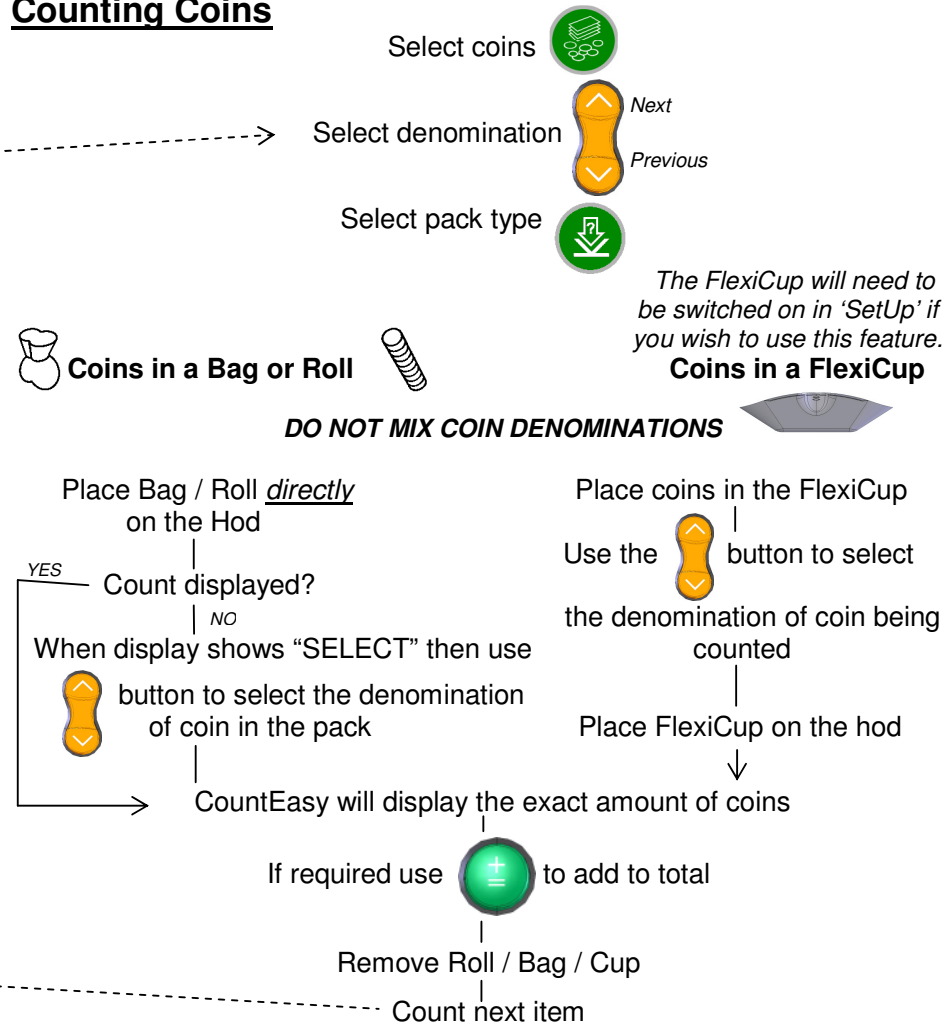



## Switching On

- 1: Place your CountEasy on a *flat stable surface away from draughts*.
- 2: DO NOT use near an open window, fan or air-conditioning.
- 3: Ensure hod is empty
- 4: Turn on 

## Counting Coins



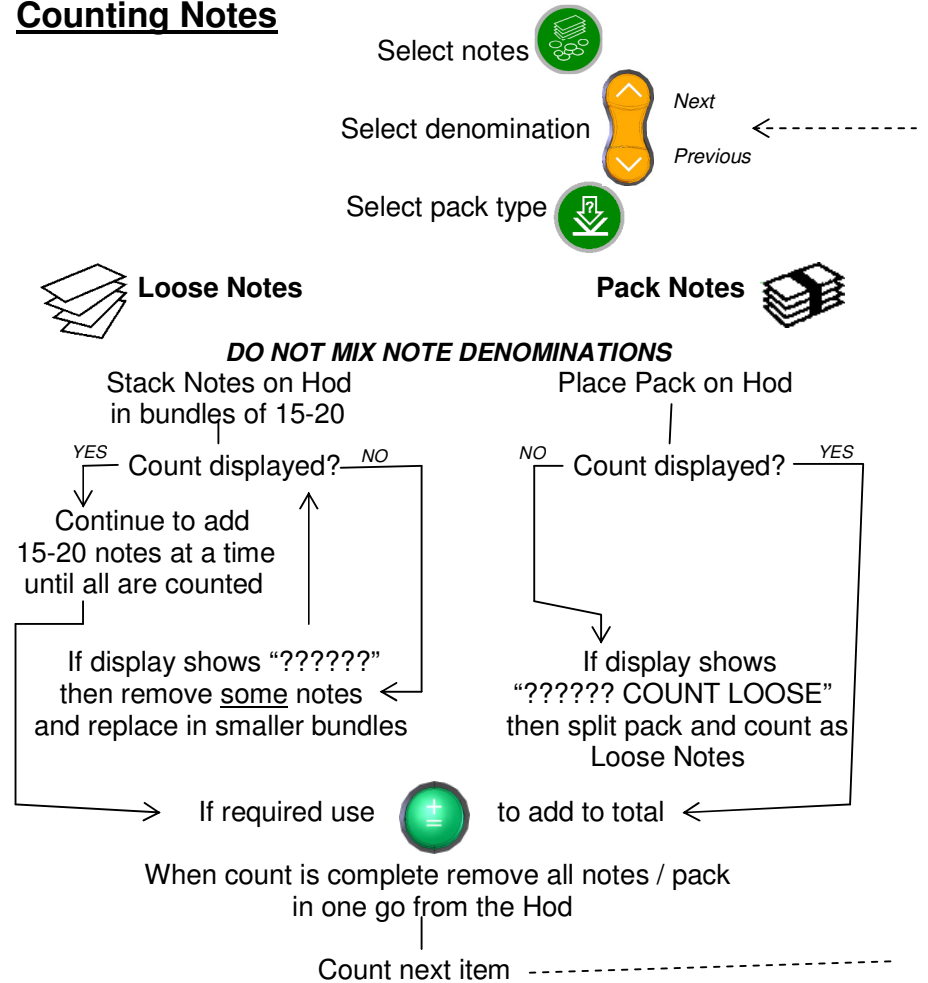

## Counting Notes






**IMPORTANT INFORMATION:** It is very important on new machines that you count loosely more than 1,000 notes for each denomination before the Pack Check on Notes is used.


In order to then continuously use the Pack Check on Notes you will also need to continue to count a large number of loose notes on the machine as this will maintain the accuracy of the Pack Check on Notes.

If you do not continue to count loose notes on the machine it will not be able to recognize 100% of the bundled notes as full and the "????????? Count Loose" prompt may regularly appear on the screen.


To **View Coin Sub-Totals** press the  button when coins are selected and then the  button to scroll to denomination.

To **View Note Sub-Totals** press the  button when notes are selected and then the  button to scroll to denomination.

To **Print Grand Total** press and hold down the  button until printing starts. Once started release the button. Remove print out from the printer.

To **Clear a Denomination Sub-Total** view the denomination sub-total as detailed above and then press the  button to clear.

To **Clear Grand-Total** press  followed by  button.

To **Turn Off** press and hold the  button.

### Error Messages

- 1: 'REPLACE/ZERO' means that something has been removed from the hod and needs to be replaced or "zeroed" before weighing can take place.
- 2: 'REMOVE/ZERO' means something has been added to the hod and needs removing or "zeroing" off before weighing can take place.

### Warnings

- 1: DO NOT drop heavy weights onto the hod. Maximum weight 1 Kg.
- 2: Only use the charger supplied with the CountEasy.
- 3: Maximum operating temperature is 30 degrees C.

**CAUTION:** Batteries must be replaced with correct type - refer to 'CountEasy Bank Configuration Manual'. There is a risk of explosion if the batteries are replaced by an incorrect type. Dispose of used batteries according to the manufacturers instructions. Refer to the 'CountEasy Bank Configuration Manual' for the configuration options available and the website for answers to the most frequently Asked Questions / Troubleshooting Guide.



CE Bank

[www.Volumatic.com](http://www.Volumatic.com)  
Helpdesk: refer to machine




Recyclable

25-201668 Issue 9 Dec 2009

## CountEasy Bank Quick Reference Guide

### Assembly

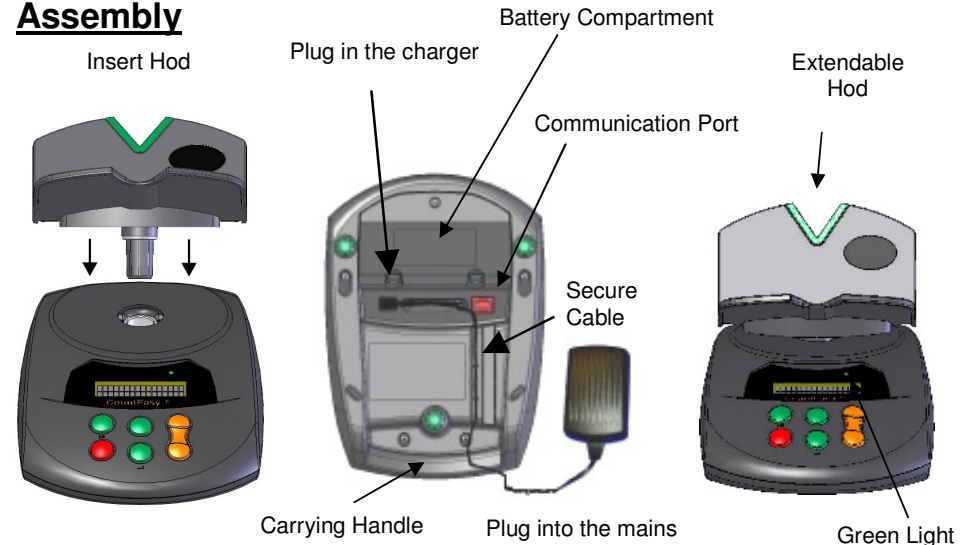

Charge the CountEasy for 12 hours before using in portable mode. The green light will be on continuously whenever a working charger is plugged into the CountEasy and the mains are switched on. The green light also indicates that the CountEasy is charging and will stay lit *even when the unit is fully charged.*

### Controls

